

Printer always prints one copy despite selecting multiple copies

Article Number: 710 | Rating: 5/5 from 3 votes | Last Updated: Tue, Jul 22, 2014 at 8:52 AM

Symptom: Printer always prints one copy despite selecting multiple copies. This could occur with any printed documents. Printer: HP Laserjet (1200 series), other **Solution:** Fix is disabling Mopier Mode following in Devices and Printers 2. Double-click printer 3. Double-click "Customize your printer" 4. Click "Device Settings" tab "Mopier Mode" to Disabled under the "Installable Options" group. Source:

http://answers.microsoft.com/en-us/office/forum/office_2007-word/my-computer-will-only-print-one-copy-even-tho-i/7

Posted by: [Dan J](#) - Tue, Jul 22, 2014 at 8:52 AM. This article has been viewed 11502 times.

Online URL: <https://mitchell1.com/knowledgebase/article.php?id=710>